

**6.3A**  
**Inspection/Functional Test Procedures - Daily**  
**Start of Shift (Career / Volunteer Duty Shift) and After Use**

1. Check Straps for rips or tears, extend fully.
2. Remove SCBA from mounting bracket.
3. Check cylinder pressure, refill/replace if less than full.
4. Check high-pressure hose and coupling, tighten if needed.
5. Turn on cylinder, listen for vibralert and PASS chirps.
6. Check HUD on regulator & operate purge valve.
7. Check PASS activation (normal & manual)
8. Close cylinder.
9. Check facepiece and rubber seal for deformity or damage.
10. Check facepiece straps for rips, tears, extend fully
11. Check powered voicemitter for operation.
12. Connect regulator, press facepiece against face, inhale to check airflow.
13. With the regulator attached, check for seal once air is drained from system.
14. Place SCBA back into mounting bracket.
15. If not using a personal face piece, disinfect accordingly.

\*All issues shall be reported to an officer.

\*Officers shall complete appropriate repair forms and remove SCBA from service.

**Reference:**

6.3 Respiratory Protection